

## WARRANTY

DR Distribution guarantees that any part\*, which we find to be defective in materials or workmanship will be repaired or replaced free of charge for the parts and any service labour for a period of 24 months for residential use and 12 months for commercial use from the **date of purchase**, as the original purchaser of a Pureheat product, provided that all service be pre authorised by DR Distribution.

- **\*The heater warranty does not cover service calls related to over- temperature safety devices activating and shutting the heater down.**
- **\*This Warranty does not cover failure due to accidental damage, misuse or negligence, nor does it cover any consequential damages.**

**Important:** If you are experiencing difficulties with the operation or believe that your Pureheat heater is faulty in any way, contact D R Distribution on 02 9618 3842

For the purpose of this warranty, it is a condition that the "wired in" models must be installed by a registered electrical contractor and must be wired in accordance with our wiring instructions. Similarly, this warranty becomes void if the heater is serviced, repaired or altered by anyone other than D.R. Distribution or its authorised Service Agents or if parts, other than approved parts, have been used.

Record the date of purchase below and retain this card, together with your purchase invoice for your own future reference.

The benefits conferred by this warranty are in addition to all other rights and remedies which the consumer has under the Trade Practices Act and other legislation.

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

MODEL NO: \_\_\_\_\_ SERIAL NO: \_\_\_\_\_

INSTALLED BY: \_\_\_\_\_ DATE: \_\_\_\_\_

**PUREHEAT**

*DR Distribution Pty Ltd*

Unit 9 No 3 Lancaster St Ingleburn NSW 2565

Ph 02 9618 3842

www.drdistribution.com.au



## MODEL

**TIMERBOX:** HM7B (Rated at 15 Amps)

## INSTALLATION INSTRUCTIONS

Note: Suitable for use with any electric heater up to 3.5 KW Only suitable for heaters above 3.5 KW if used with a relay.

1. Remove knob screw is located on the side of knob
2. Remove (2) side self tappers holding front cover to inner panel
3. Disconnect wires to pilot light and unit body (if needed).
4. Fit unit to the wall using the (4) mounting points. Ensure unit is level and secure.

Note: For best results mount on a wall approximately halfway between the heater and the furthest wall from the heater.

**DO NOT mount directly below the heater!**

Unit will not work correctly if installed below Heater

5. Connect active from isolated mains power to terminal A1. (Cable located closest to the wall – red cable).
6. Connect neutral from isolated mains to terminal N. (cable located closest to front – black cable).
7. Connect active from the heating unit to terminal A2 (the middle terminal – red cable).
8. Reconnect wires that were disconnected during point 3.
9. Ensure all electrical connections are tight
10. Fit front.
11. Attach knob.
12. Ensure unit is in correct working order.

**Dimensions:** L: 180mm      W: 80mm      D: 80mm

**Cable Entry:** Unit has an open back. It is recommended to make it central.

## OPERATING INSTRUCTIONS

The HM7/B is fitted with a 3HR timer which can be turned anywhere from 0 to 3 hours. Once the timer has returned to zero the heater will switch off.

The HM7/B is fitted with a thermostat which will cut power to the heating unit (when timer is operating) once the preset temperature is reached (approx. 25 degrees) and will cut back in once the room temperature has dropped.



## TIMER BOX WIRING DIAGRAM

